# Transom Top
## Installation Instructions

### Step 1

NOTE: Only the 14 3/4" Transom Top contains the Transom Clips.

Attach the Transom Top to the shutter by using the clips provided. Align the shutter and the Transom Top on a flat surface. Join them together by pushing each clip on as far as it will go. Use 2 clips per Transom Top. See Figure 1 at right for clip placement.

### Transom Clip Installation

A Transom Clip will also need to be installed in addition to the 2 clips. Start by pushing one end of the Transom Clip onto the shutter, clamping the shutter to the Transom Top. Work the Transom Clip down until the entire clip is fastened to the shutter. Be sure the Transom Clip is pushed on as far as it will go. See Figure 1 at right.

Note: Some shutters contain support ribs at the top. This will need to be removed using a

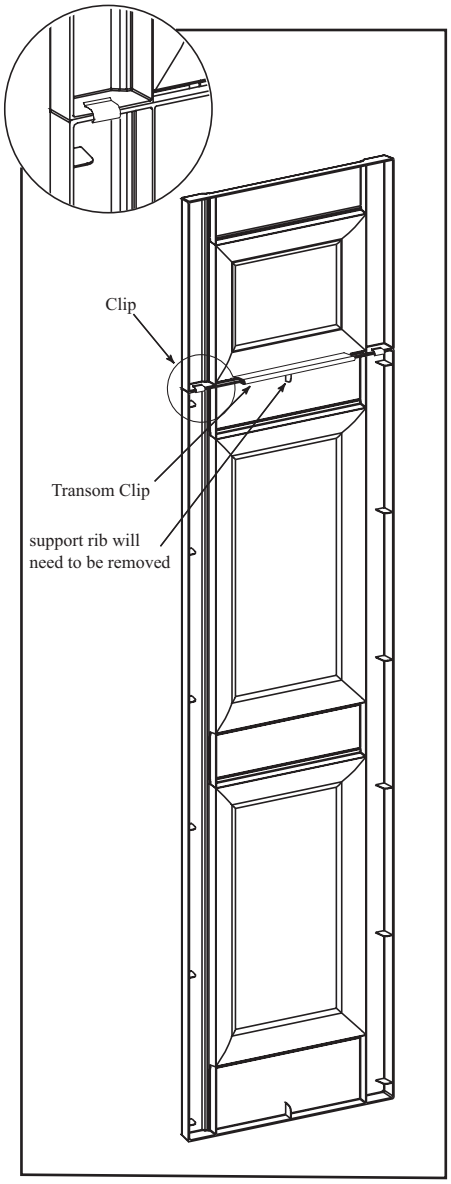


Fig. 1 (back of assembly)

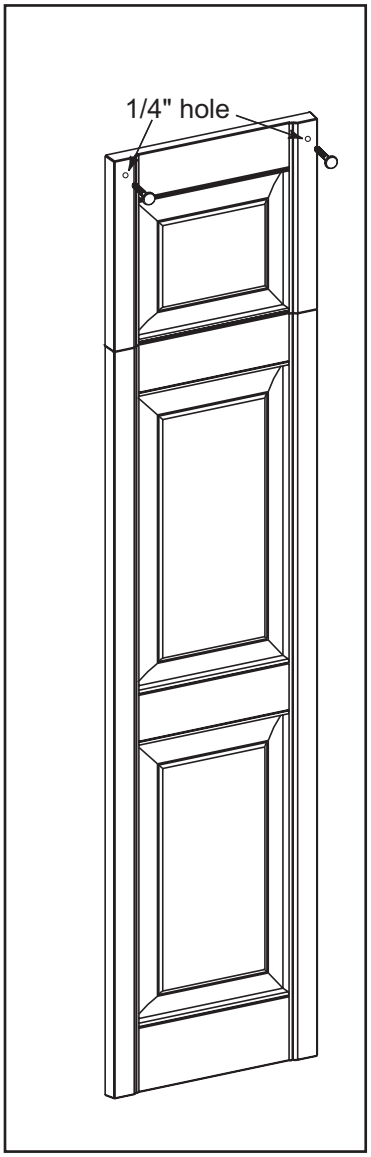


Fig. 2 (front of assembly)

### Step 2

Fasten the shutter to the wall using the instructions supplied with the shutter.

### Step 3

Fastening the Transom Top to the wall is just like fastening the shutter. With the shutter in location against the wall, drill through the Transom Top and wall a total of 3 1/4" with a 1/4" drill bit. See Figure 2 at right for proper Shutter Lok location.

### Step 4

Grasp the Shutter-Lok by supporting the shank, and push it through the shutter hole and into the wall surface. Tap the Shutter Lok gently with a hammer to snug the shutter against the siding. Do not over tighten , or this will cause the shutter to dimple.

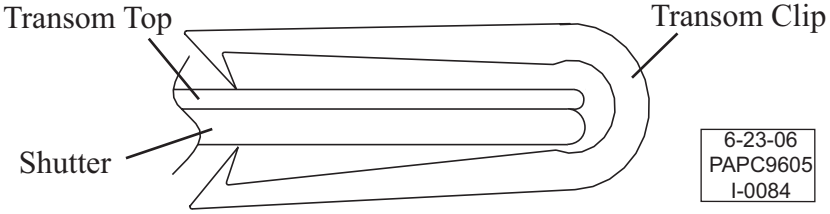


6-23-06
PAPC9605
I-0084